

Potty Monkey Watch Instructions

說明 • Instrucktioner • Instrucciones • Anleitung • Istruzioni

Set Timer

設置定時器 • Régler la Minuterie Horas Fijas
Stunden Einstellen • Impostare le Ore

Hold 3 secs

按住3秒鐘 • Tenir pendant 3 secondes
Mantener pulsado durante 3 segundos
für 3 Sekunden halten
Tenere premuto per 3 secondi



Push to advance timer.

按下以提前 時器 • Appuyez pour faire avancer la minuterie.
Empuje para avanzar el temporizador. • Drücken, um den
Timer vorzustellen. • Premere per far avanzare il timer.

Start/Stop

开始/停止 • Démarrer/Arrêt Activar/Detener
Starten/Stoppen • Avvia/Fermato



Hold 3 secs

按住3秒鐘 • Tenir pendant 3 secondes
Mantener pulsado durante 3 segundos
für 3 Sekunden halten
Tenere premuto per 3 secondi



NOT WATER RESISTANT!

不防水 • Pas résistant à l'eau • No resistente al agua
Nicht wasserresistent • Non resistente all'acqua



Questions?

support@pottymonkey.com

+1-865-584-6700

We're here to help!



Look for Potty Monkey's
fun & educational videos!

找Potty Monkey的有趣和教育

Recherchez les vidéos amusantes et éducatives de Potty Monkey!

¡Busca los videos divertidos y educativos de Potty Monkey!

Schauen Sie sich Potty Monkeys lustige und lehrreiche Videos an!

Cerca i video divertenti ed educativi di Potty Monkey!